

H-disease in TESLA cavities

- Q-reduction in SC cavities
 - First disastrous findings with HERA cavities and at the Darmstadt SC linac
 - Suspicion of Hydrogen as reason for loss
 - Confirmation of Hydrogen disease
- H disease test in 9-cell cavities
 - List of all tests
 - Discussion of test results
 - Conclusion to XFEL operation
- Recent findings at KEK
- Discussion & Conclusion

Hydrogen Disease in SC Cavities

„Q-disease“

- First observation of anomalous increase of cavity losses
 - At HERA cavities after second or more cool downs at horizontal cryostat in 1991
 - Similar effect seen at the Darmstadt SC accelerator after warm up to 140K due to refrigerator break down and cool down after 20 hours.
 - Was never seen at vertical test stands before, only after very slow cool down during Christmas at Wuppertal
- Systematic investigations were started at several laboratories afterwards.

First observation of Q-disease with HERA Cavities


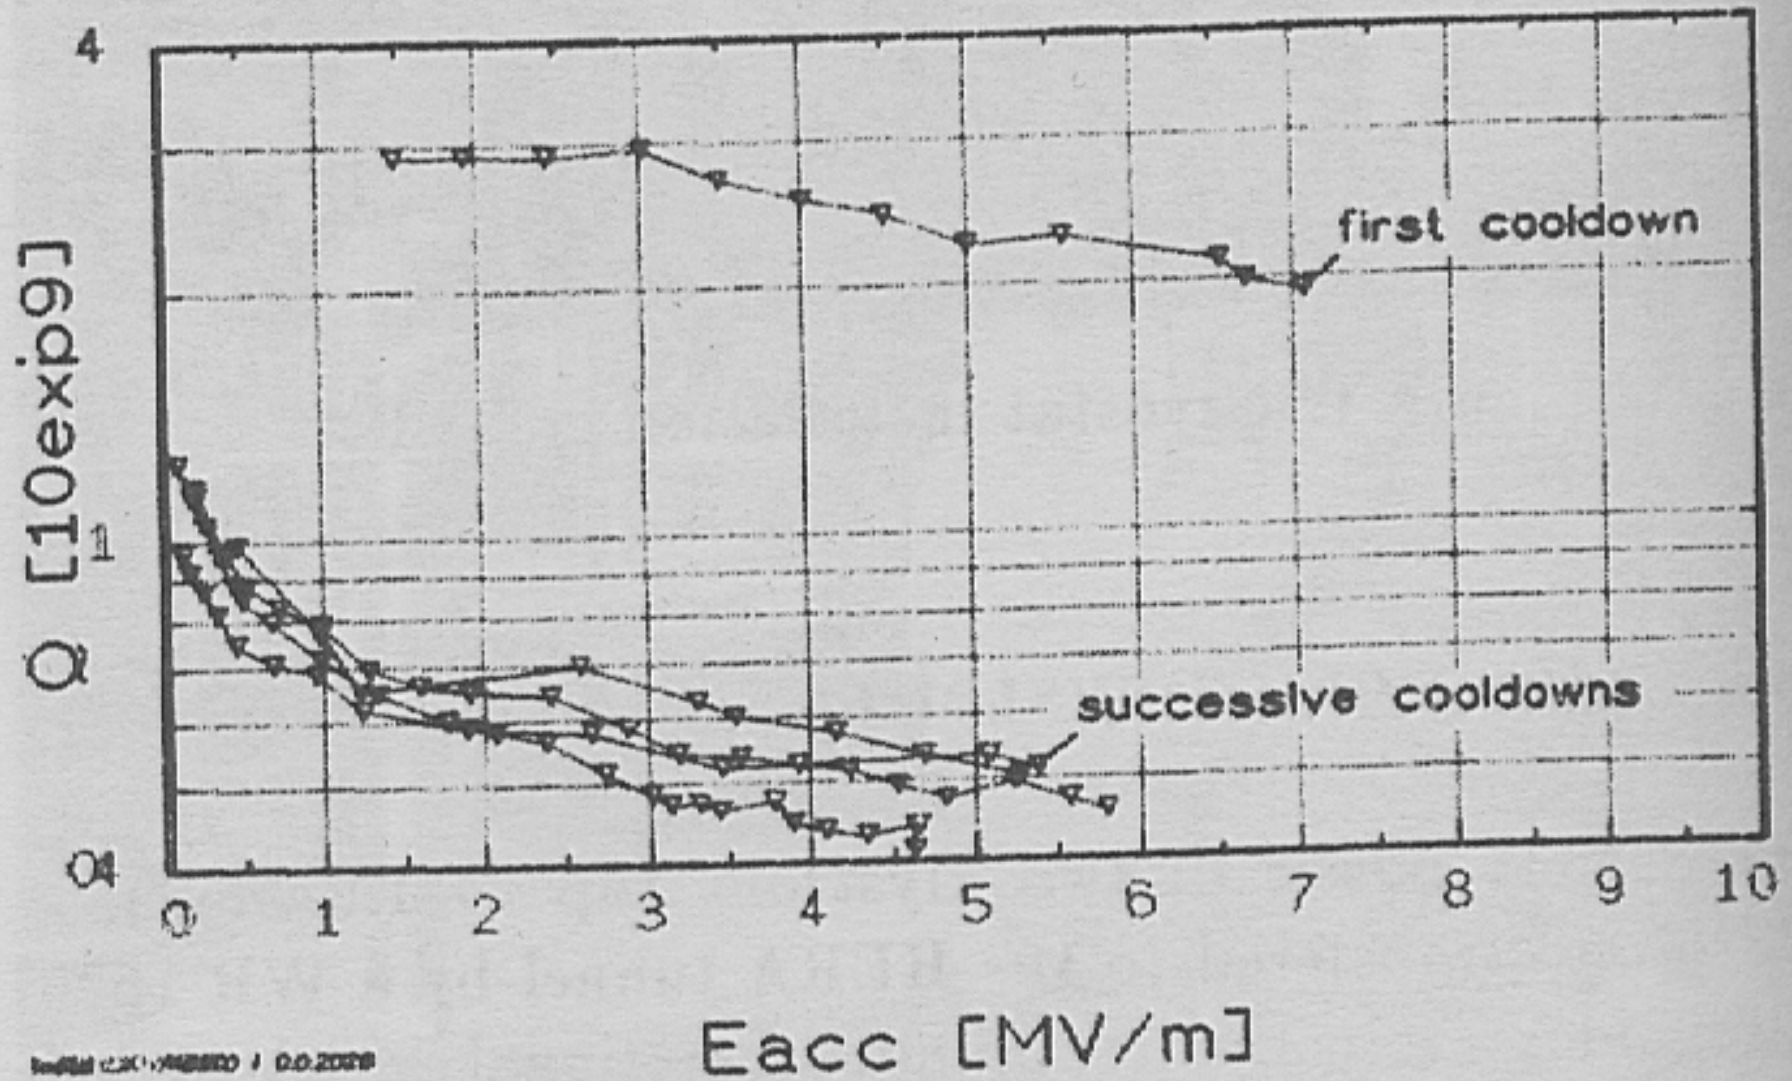


Figure 1: Q degradation after several cooldowns

Range of
possible
H
pollution

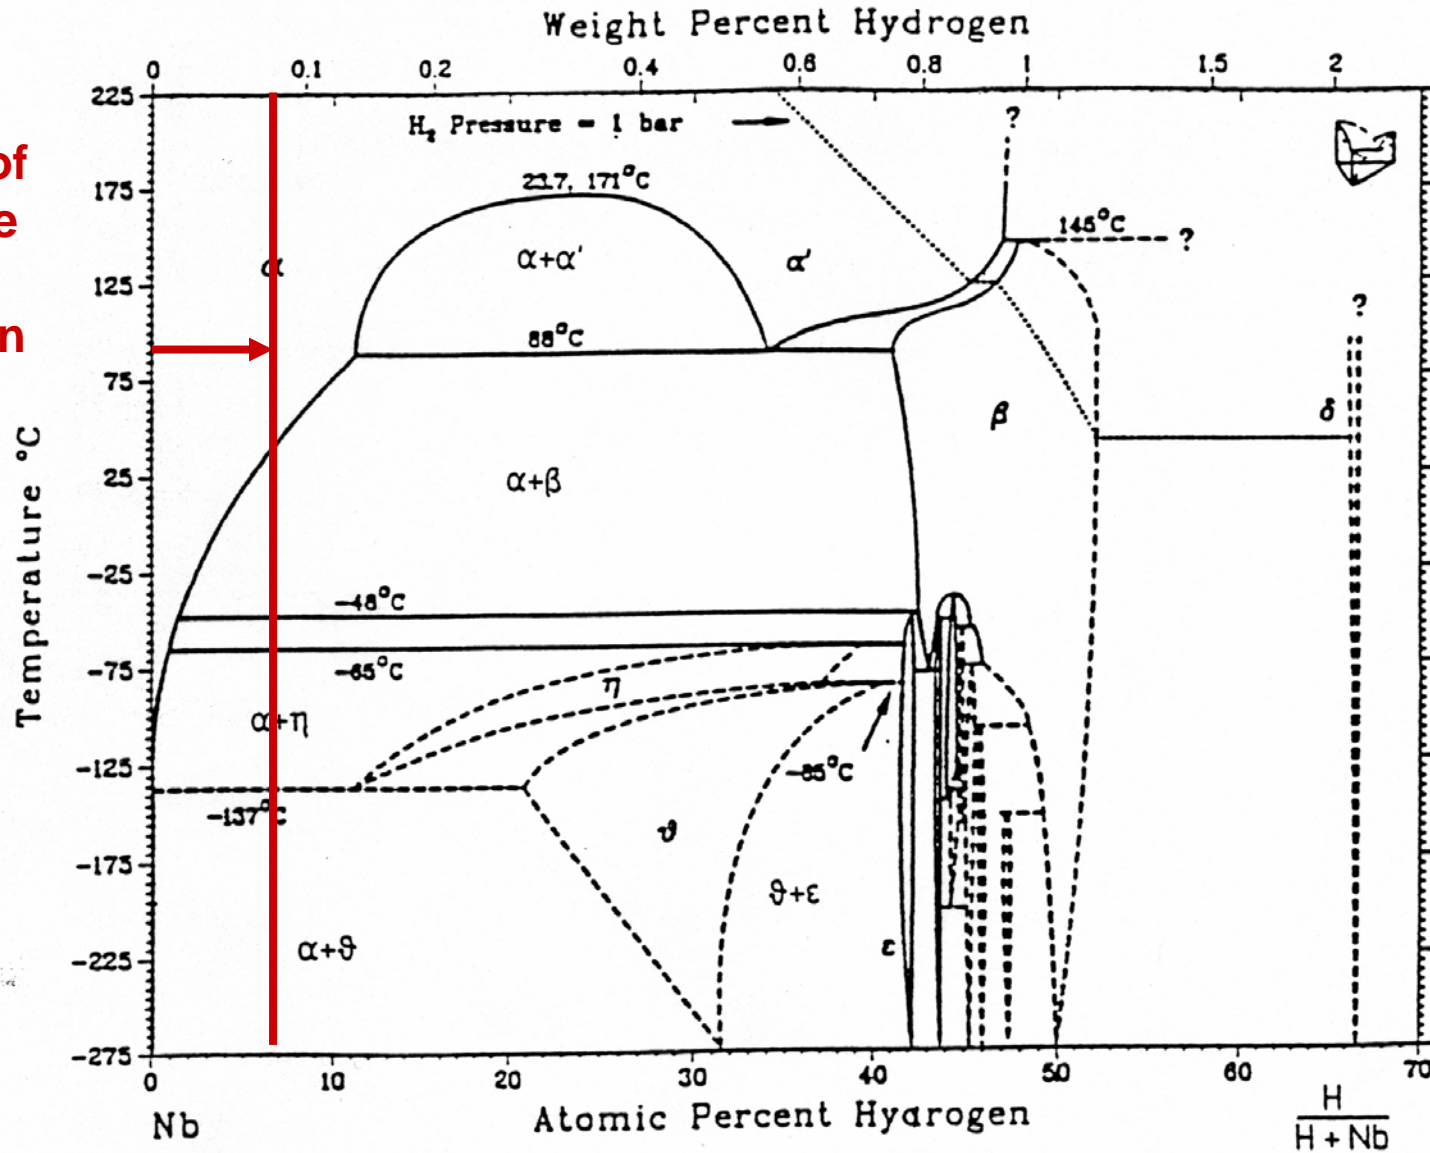

Phasendiagramm des Nb – H Systems für chemisch reines
rekristallisiertes Nb im thermischen Gleichgewicht

Verification of H-disease effect around 100K with HERA cavities

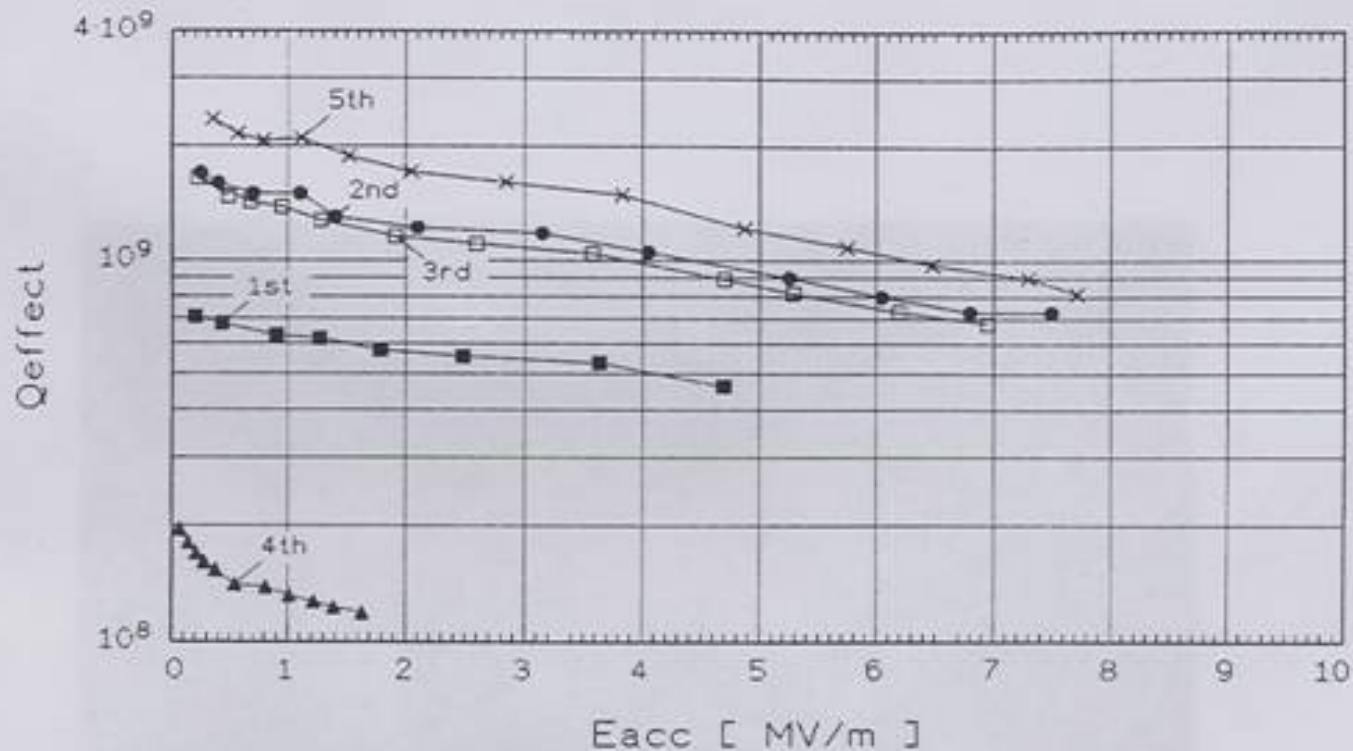


Fig. 3: Measured Q vs E_{acc} curves for different cooldown conditions
1st: continuous cooldown from 300 K to 4.2 K in 24 h
2nd (3rd, 4th, 5th): stop during cooldown at 180 K (150 K, 100 K, 150 K) for 20 h; afterwards fast cooldown to 4.2 K in about 1.5 h (1.8 h, 1.5 h, 1.3 h)

H disease investigations (Saclay)

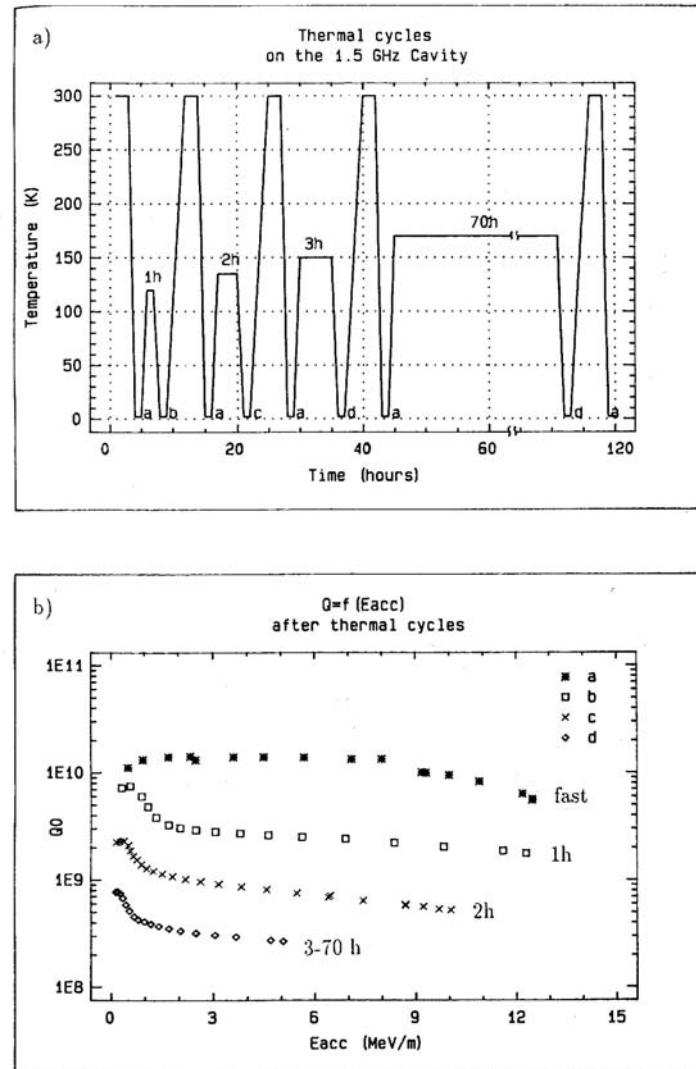


Fig. 1

Mechanism of Hydrogen disease

- Hydrogen can move freely in Nb at room temperature as interstitial impurity
- There is a phase transition to NbH_x around 130K
- NbH_x has a slightly larger lattice constant as compared to pure Nb
 - NbH_x will settle at lattice distortions or at the surface
 - Around 130 K NbH_x will migrate to the surface and produce RF losses (it is a normal conductor)
 - At very low temperatures NbH_x will not move any more
- Cure against H-disease
 - Fast cool down (typical condition at vertical test with dewar cooling)
 - Degassing of Nb at temperatures around 800°C (or higher)


H-disease test with 9-cell EP cavities

Cavity	Tests	Q-Tests after EP	Q-Test-negativ	Q-Test positiv
AC71	15	4	3	1
AC74	8	1	1	
AC75	5	1	1	
AC76	15	2	2	
AC78	15	4	4	
AC80	6	4	2	2
AC81	8	1	1	
Z 82	6	1	1	1
Z 83	4	2	2	
Z 84	7	5	1	4
Z85	3	1	1	
Z86	3	0		
Z87	4	1	1	
Z88	1	1	1	
Z90	3	1	1	
Sum	103	29	22	8


cavity	date	treatment	H-disease	remarks	EP container
AC 71	27.10.05	50 um EP,	yes	cool down condition not listed in data bank (100-120K)	17
	12.01.06	HT 800C, EP 50um	no	cool down condition not listed in data bank	20
AC 80	19.02.04	HT 800C,330 um EP, first test	strong	stored between 90-140K	"0"
	11.03.04	baking 120C	yes	stored between 100-150K	
	04.08.04	new HT 800C, EP 50 um	no	stored between 100-120 K	1
Z 82	24.11.05	HT 1400C, EP 70 um	yes	(70-114K)	17
Z 84	12.10.04	800C, 250um EP, first test	strong	19h between 100-140K during first cool down	4, 5
	13.10.04	re-test	weak	warm up, fast cool down	
	17.11.04	50 um EP	no	stored between 50-100K (only)	7
	11.04.05	50 um EP	yes	stored between 90-160K	9
	12.04.05	re-test	no	warm up, fast cool down	
	14.11.05	HT 1400C, 80um EP	strong	stored between 70-130K	(15, 16) 17
	15.11.05	re-test	weak	warm up, fast cool down	

9 – cell Cavities with H disease



Cavity	Q [10^9] at 23MV/m
AC 71	3,5
AC 80	0,2
AC 82	0,5
Z 84, 12.Oct 04	1,3
Z 84,11.April	0,8
Z 84 14. Nov.05	0,1




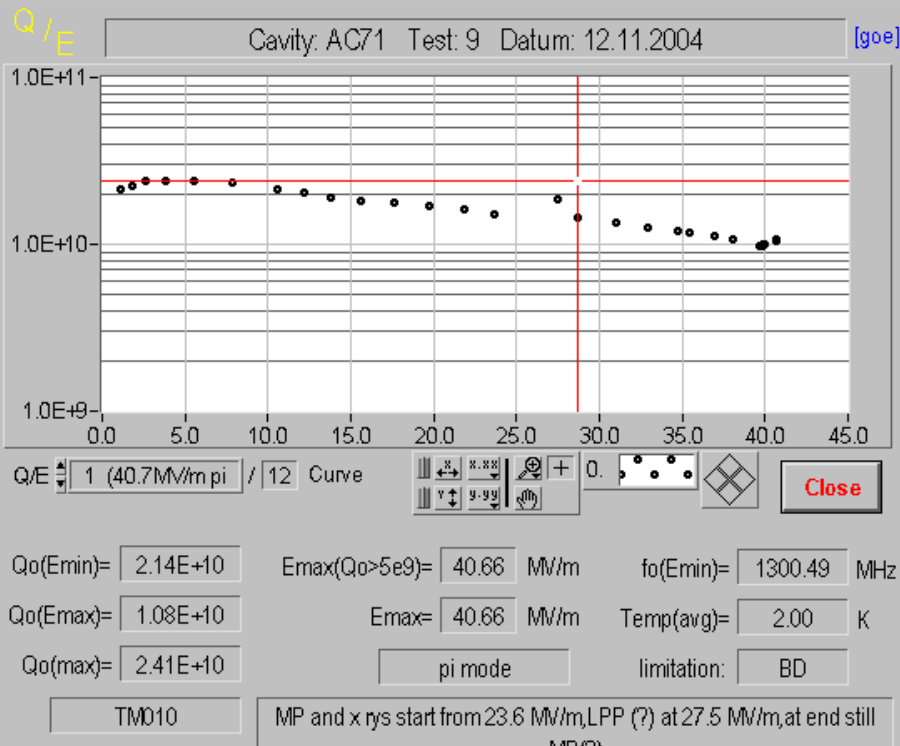






Kurve-QvsE6_X-Ray.vi

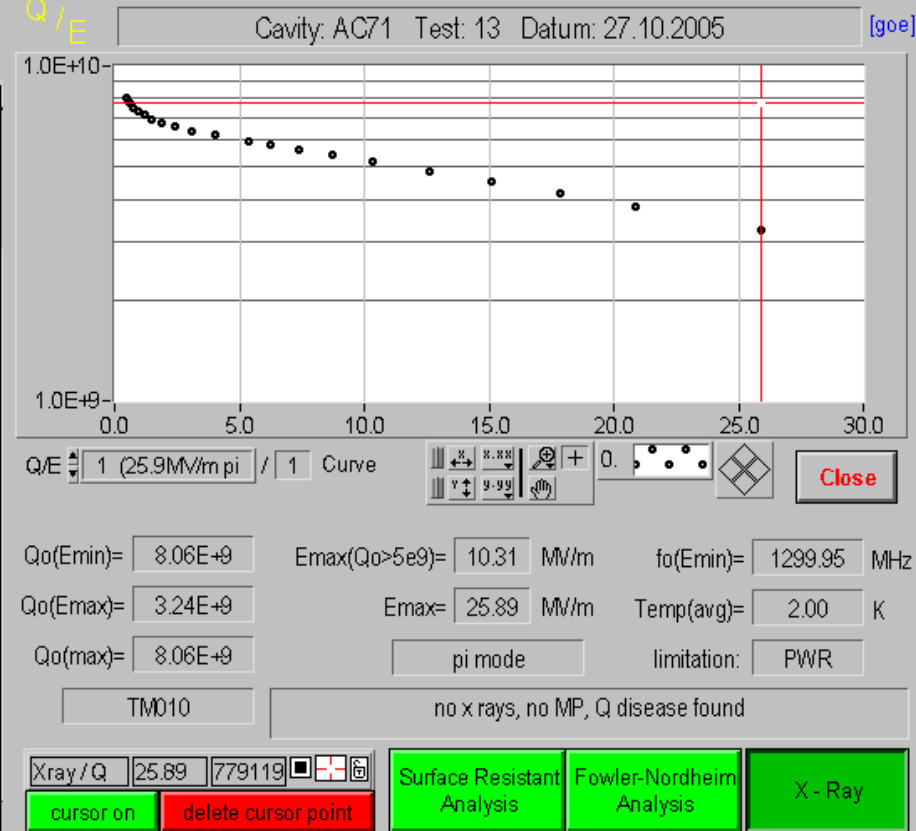


Kurve-QvsE6_X-Ray.vi

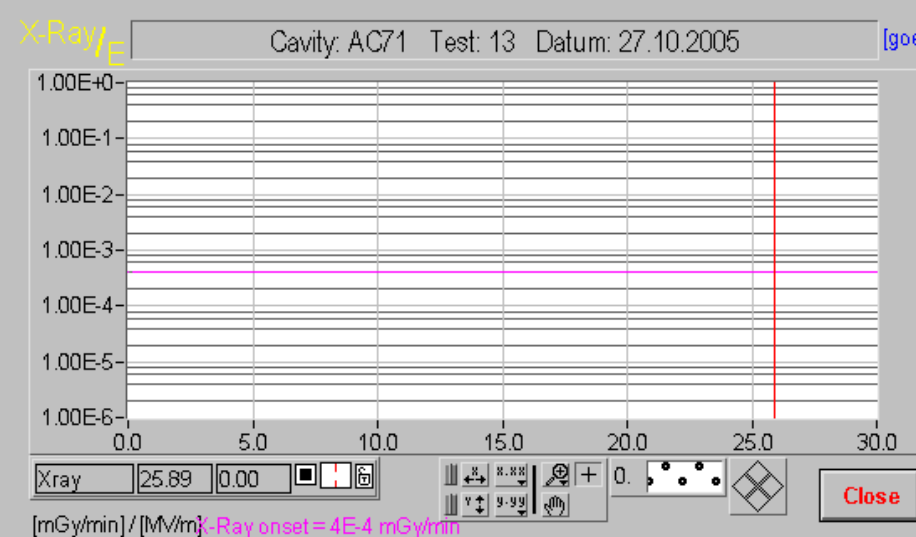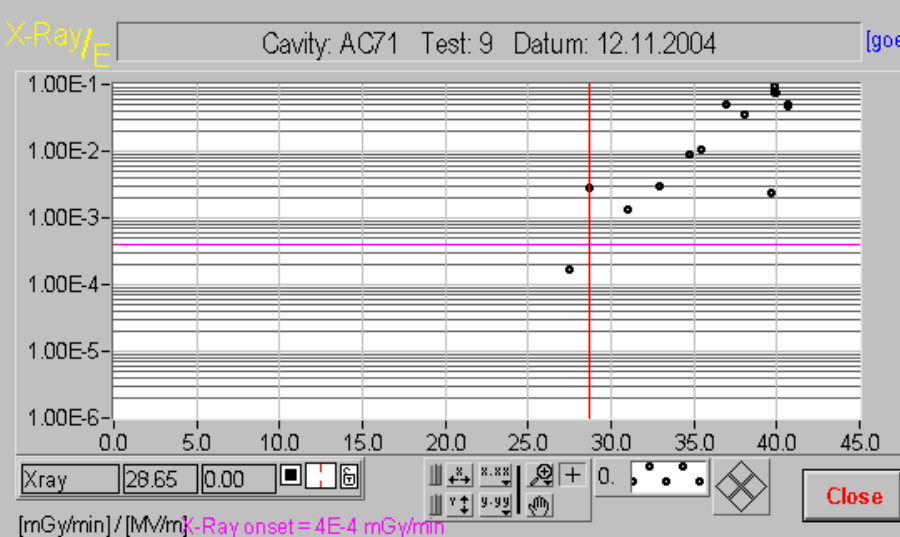

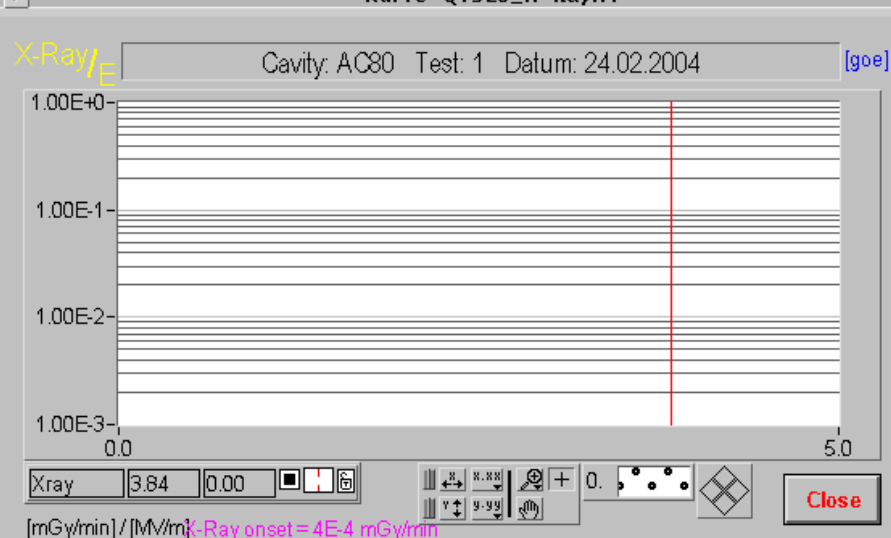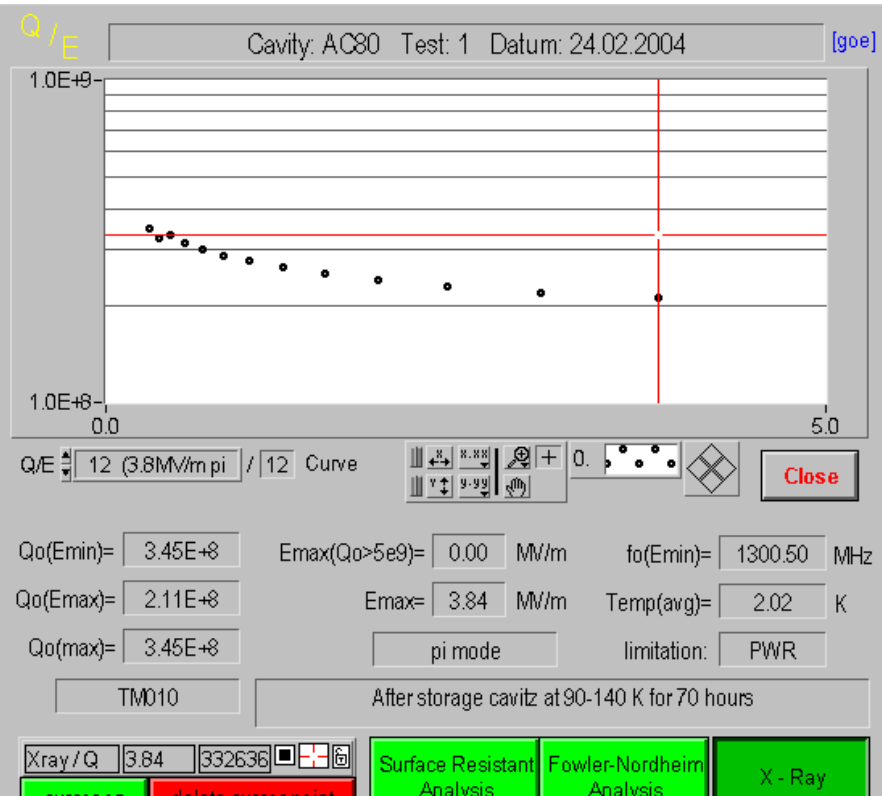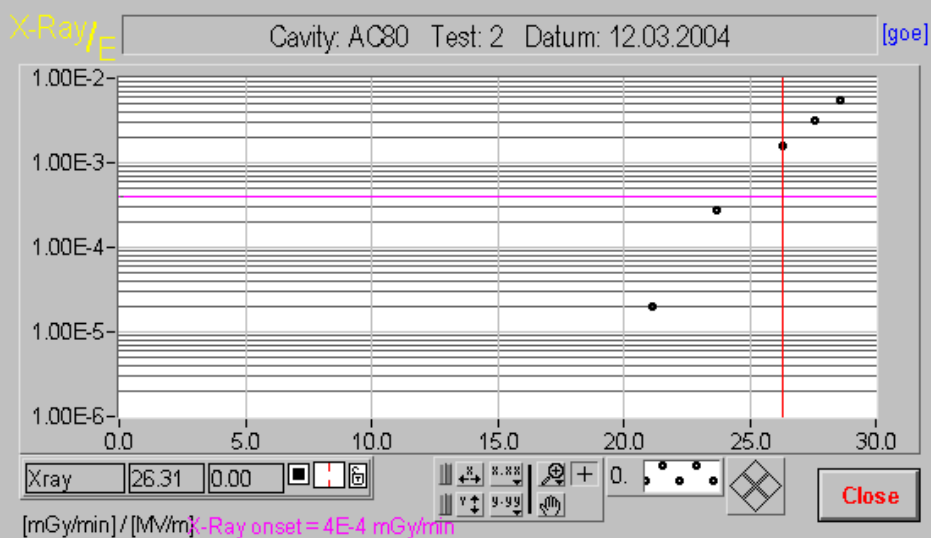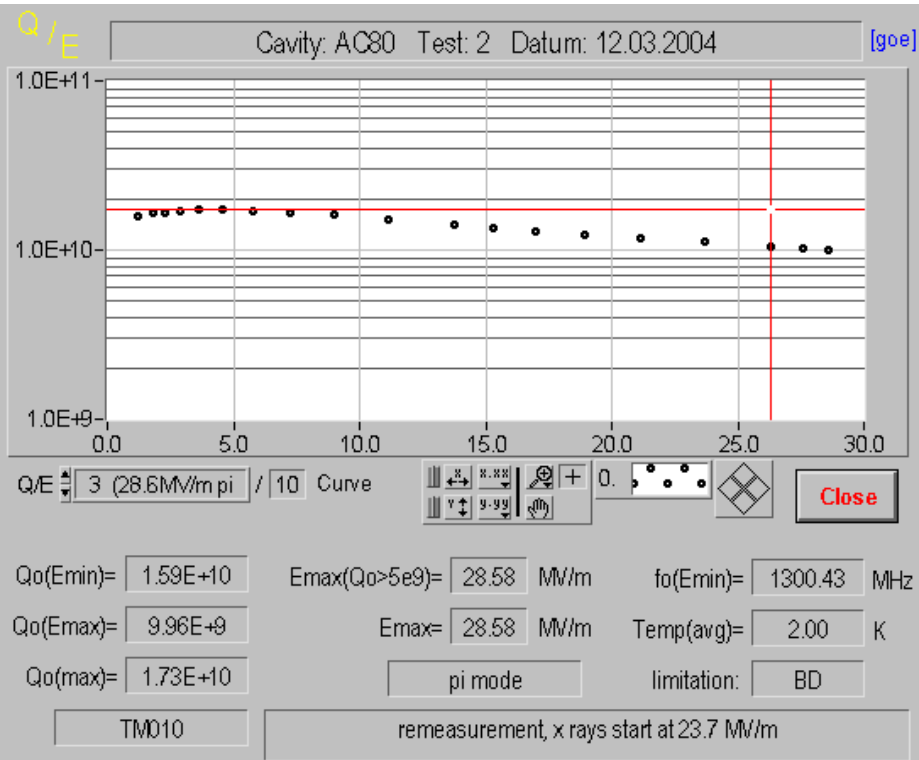

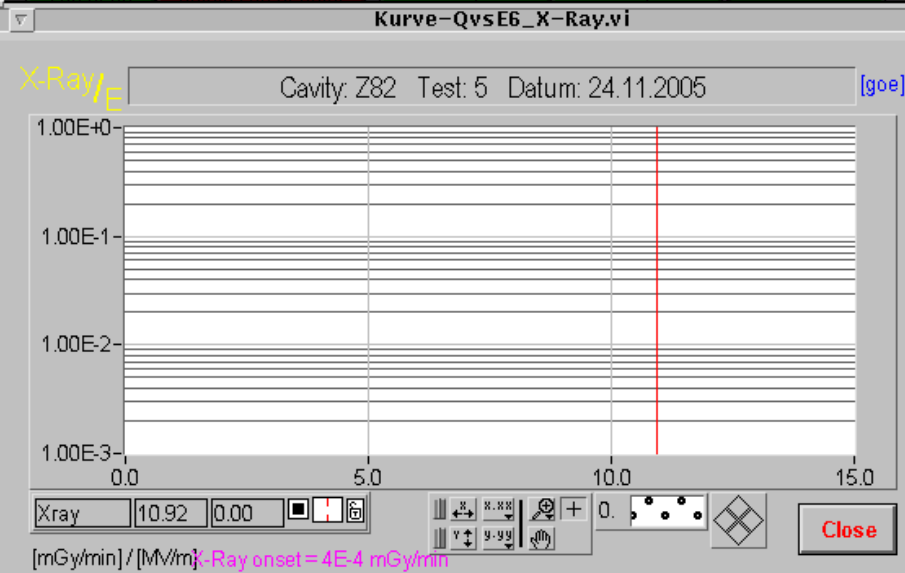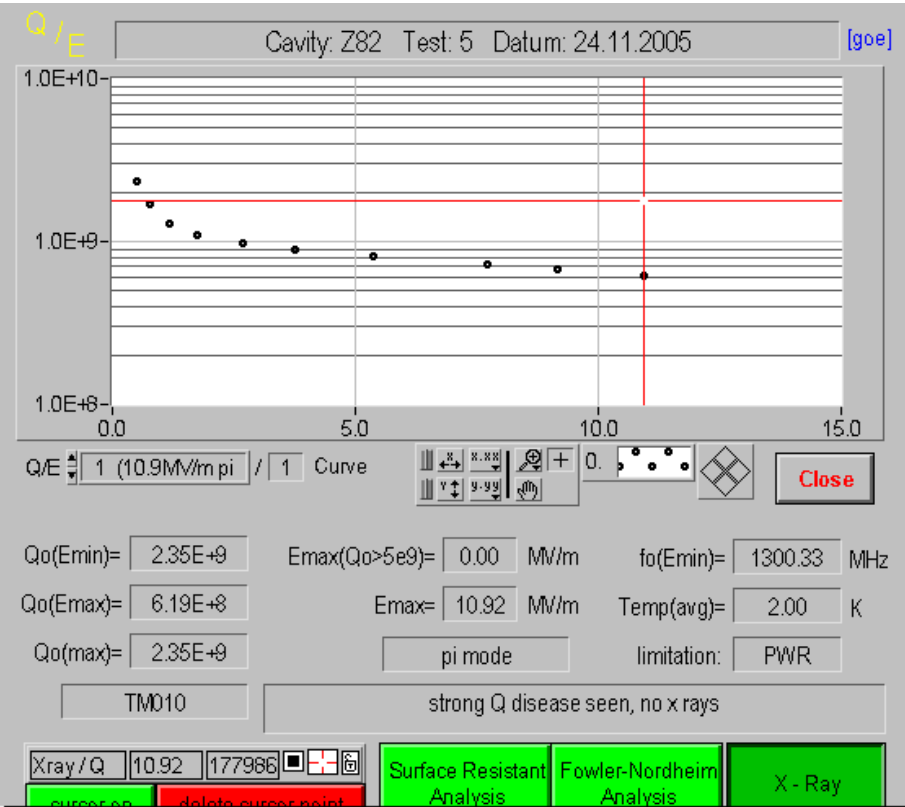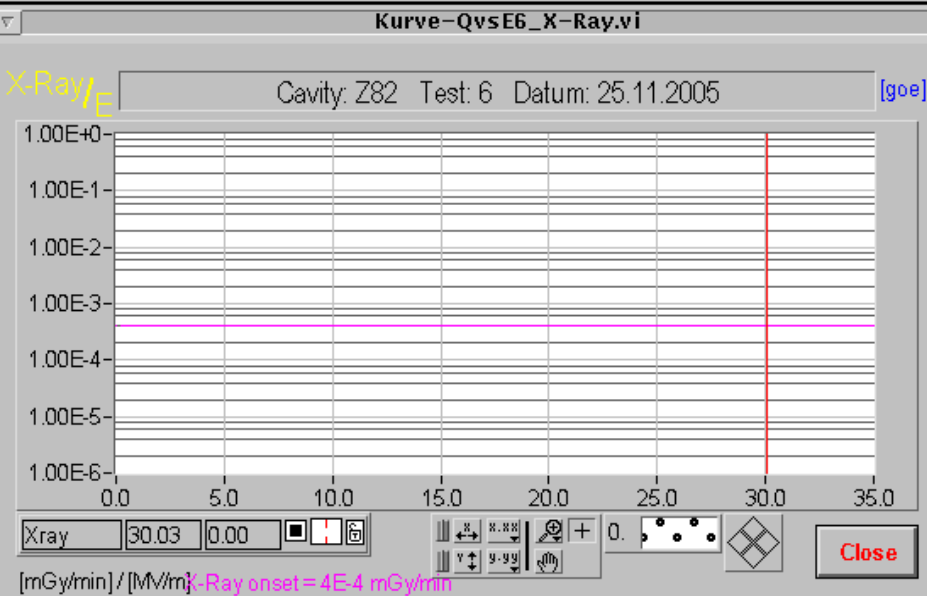
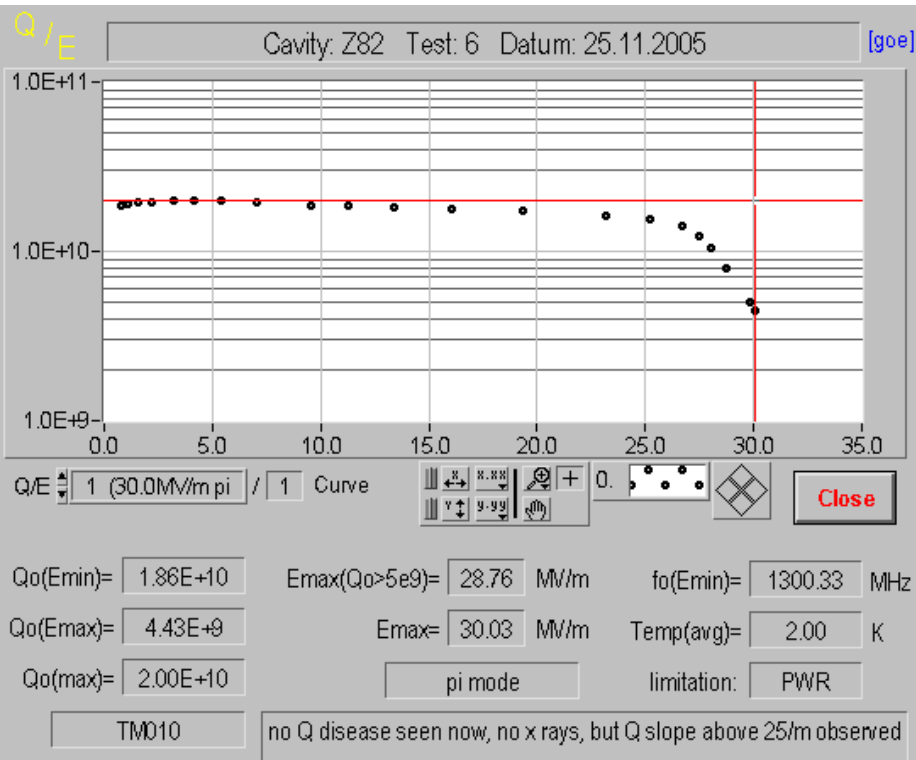


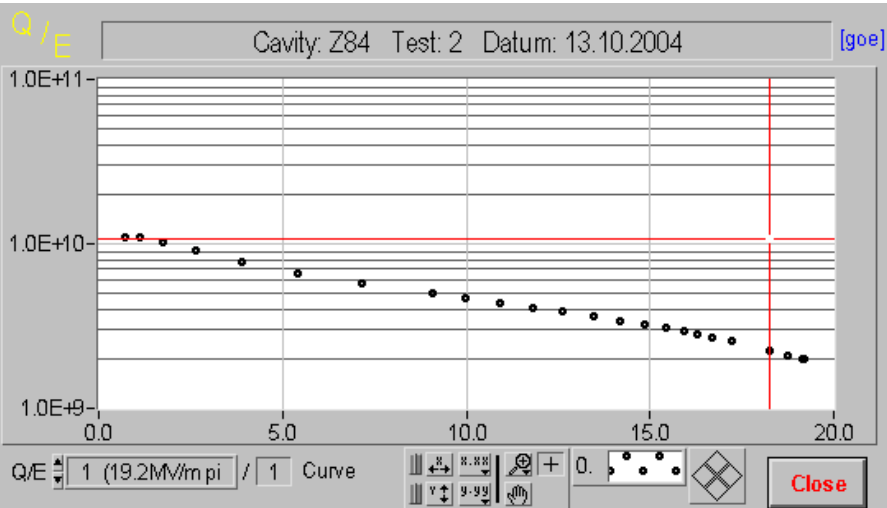

Qo(Emin)= 1.10E+10 Emax(Qo>5e9)= 7.16 MV/m fo(Emin)= 1300.38 MHz
 Qo(Emax)= 1.99E+9 Emax= 19.19 MV/m Temp(avg)= 2.00 K
 Qo(max)= 1.10E+10 pi mode limitation: PWR
 TMD10 x rays start at 15.5 MV/m, still Q disease seen

Xray/Q 18.26 106724 ☐ ☒ ☐ ☐
 Surface Resistant Analysis Fowler-Nordheim Analysis X-Ray


Kurve-QvsE6_X-Ray.vi

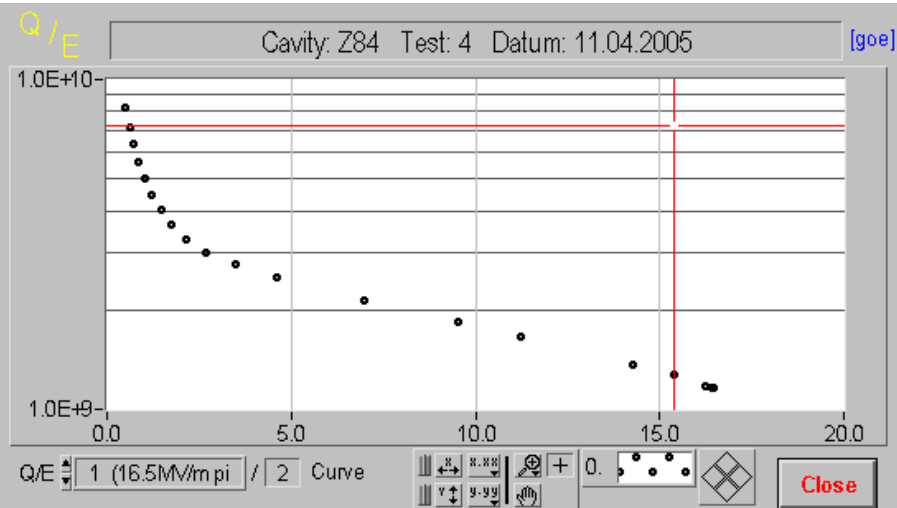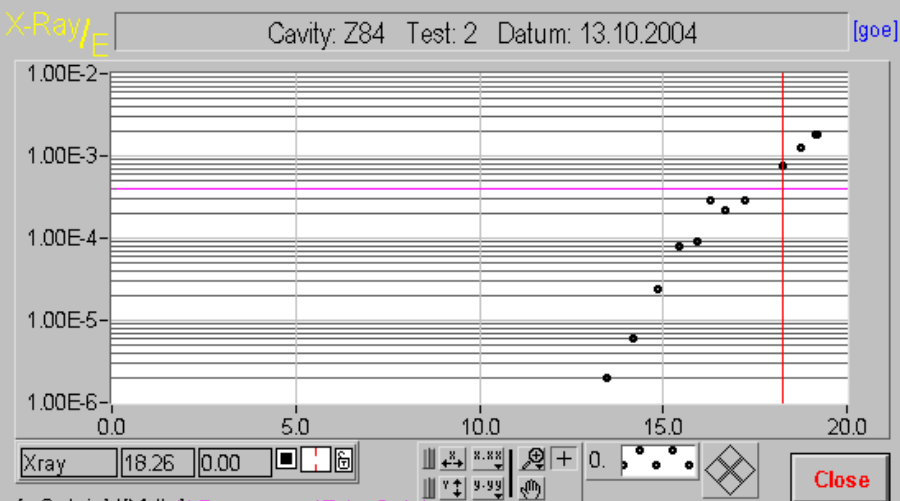


Qo(Emin)= 8.20E+9 Emax(Qo>5e9)= 1.02 MV/m fo(Emin)= 1300.25 MHz
 Qo(Emax)= 1.16E+9 Emax= 16.46 MV/m Temp(avg)= 2.01 K
 Qo(max)= 8.20E+9 pi mode limitation: PWR
 TMD10 Q-disease, x-rays from 15 MV/m

Xray/Q 15.41 723627 ☐ ☒ ☐ ☐
 Surface Resistant Analysis Fowler-Nordheim Analysis X-Ray

Kurve-QvsE6_X-Ray.vi

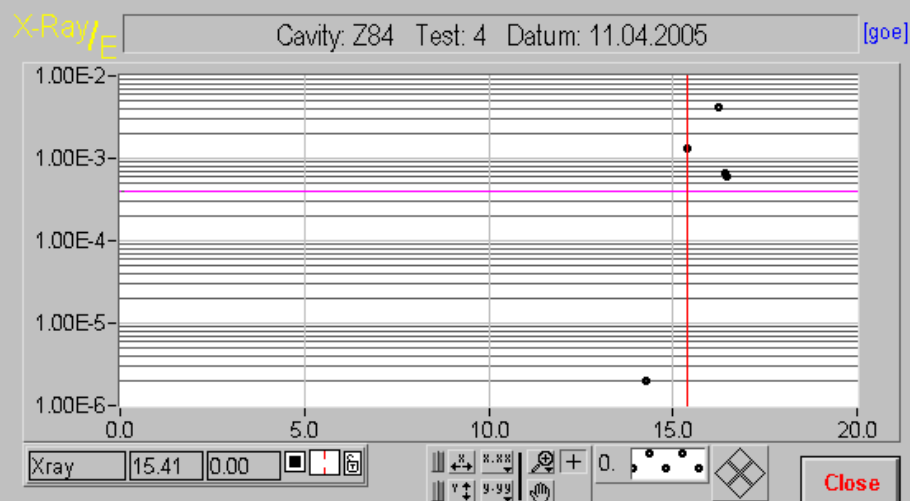

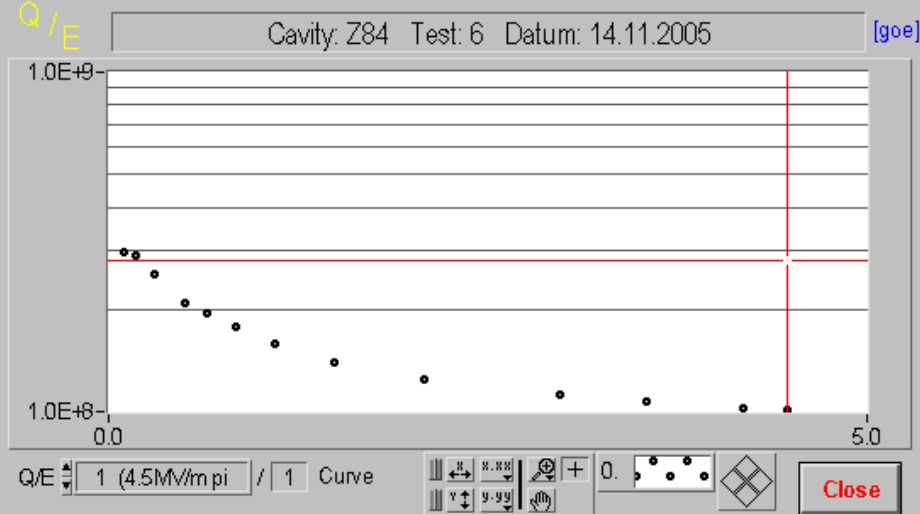


Qo(Emin)= 2.95E+8 Emax(Qo>5e9)= 0.00 MV/m fo(Emin)= 1299.88 MHz
Qo(Emax)= 1.01E+8 Emax= 4.47 MV/m Temp(avg)= 2.00 K
Qo(max)= 2.95E+8 pi mode limitation: PWR
TM010 strong Q disease seen, no x rays

Xray/Q 4.47 279323 ☐ ☒ ☐ ☐

Surface Resistant Analysis Fowler-Nordheim Analysis X-Ray


Kurve-QvsE6_X-Ray.vi

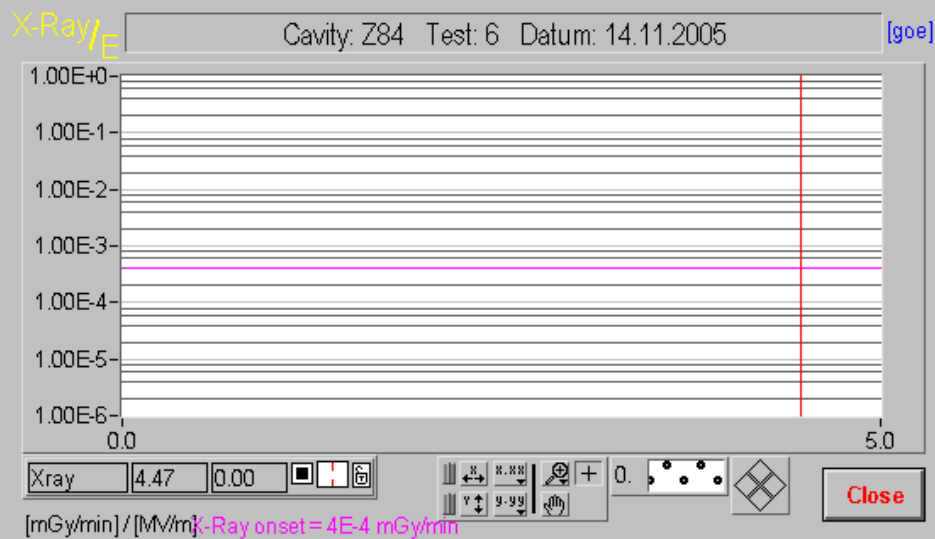


9 – cell Cavities with H disease

Cavity	Q [10^9] at 23MV/m
AC 71	3,5
AC 80	0,2
AC 82	0,5
Z 84, 12.Oct 04	1,3
Z 84,11.April 05	0,8
Z 84 14. Nov.05	0,1


Normalized loss of 29 cavities, Q ref.=10¹⁰
1=29; 2=28+AC71; 3=27+AC71+AC80; 4=26+AC71+AC80+AC82;
5=25+AC71+AC80+AC82+Z84

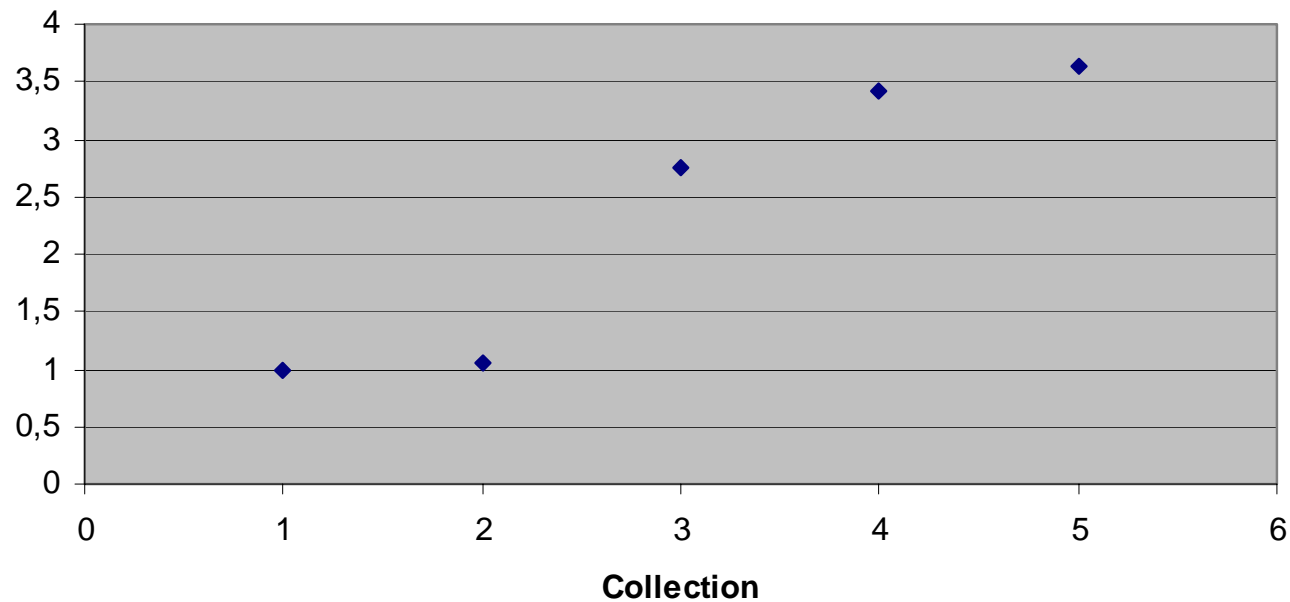

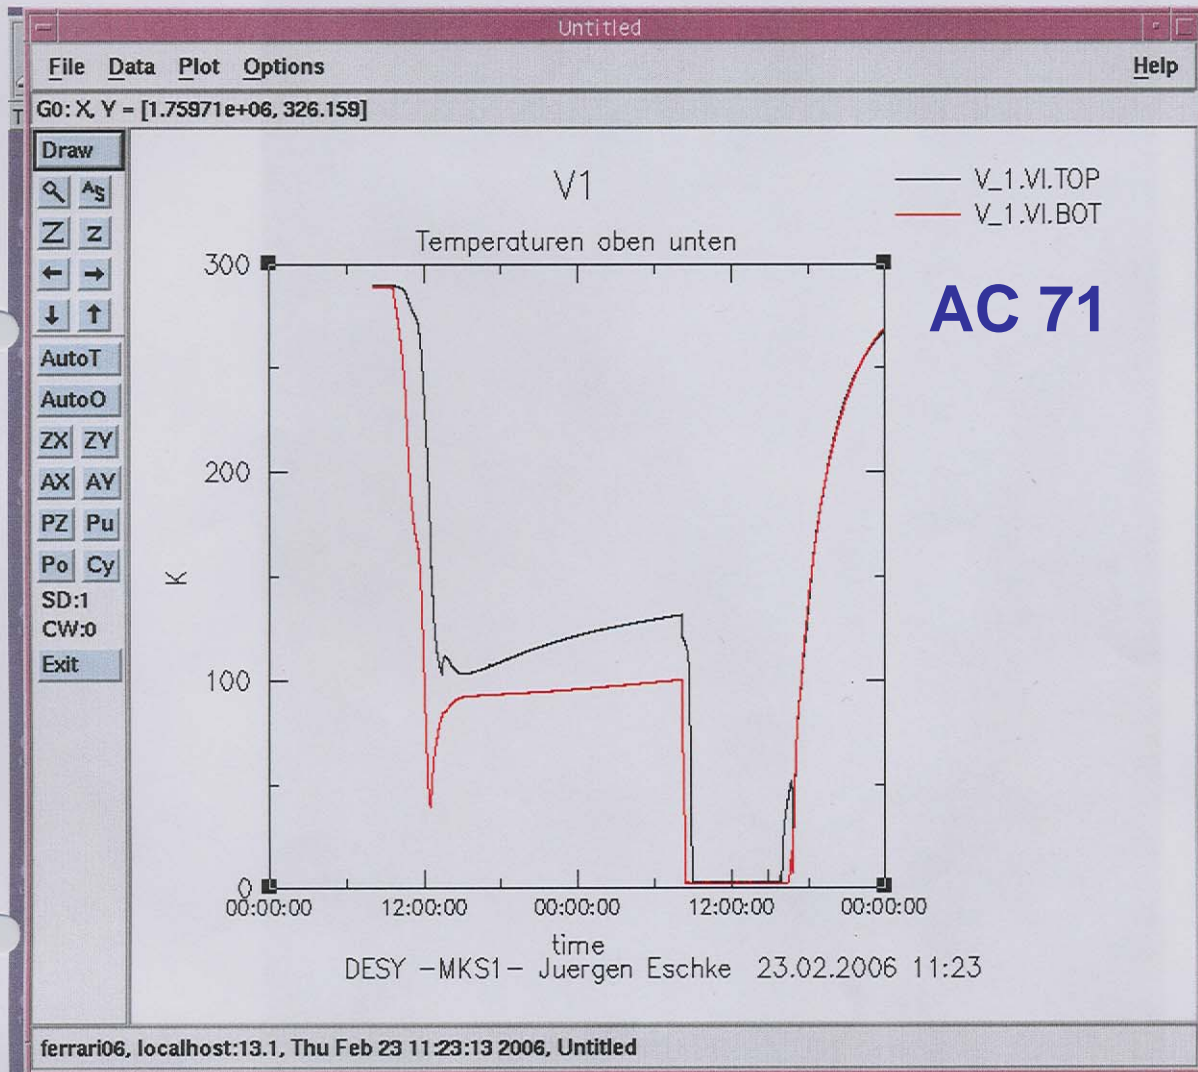

```
ferrari06:~/ccf$ CalcCobra -i -e v1-pt100-oben-unten2 -a 0510 -F 0510260800 -t 0510272355&
[1] 21521
ferrari06:~/ccf$ arcfiles 0510, from 0510260800 to 0510272355 CobraNr 0 Channels 057,058
xmgr v4.1.2
(C) Copyright 1991-1995 Paul J Turner
(C) Copyright 1996-1998 ACE/gr Development Team
All Rights Reserved
ls: /local/cobra/C.0/actual/0510*.sq: No such file or directory
CobraCalculator::CobraChin(): CobraNr = 0 CobraChannel = 36 missing
CobraCalculator::CobraChin(): CobraNr = 0 CobraChannel = 36 missing
CobraCalculator::CobraChin(): CobraNr = 0 CobraChannel = 36 missing
2355&
[2] 21803
```

AC 80

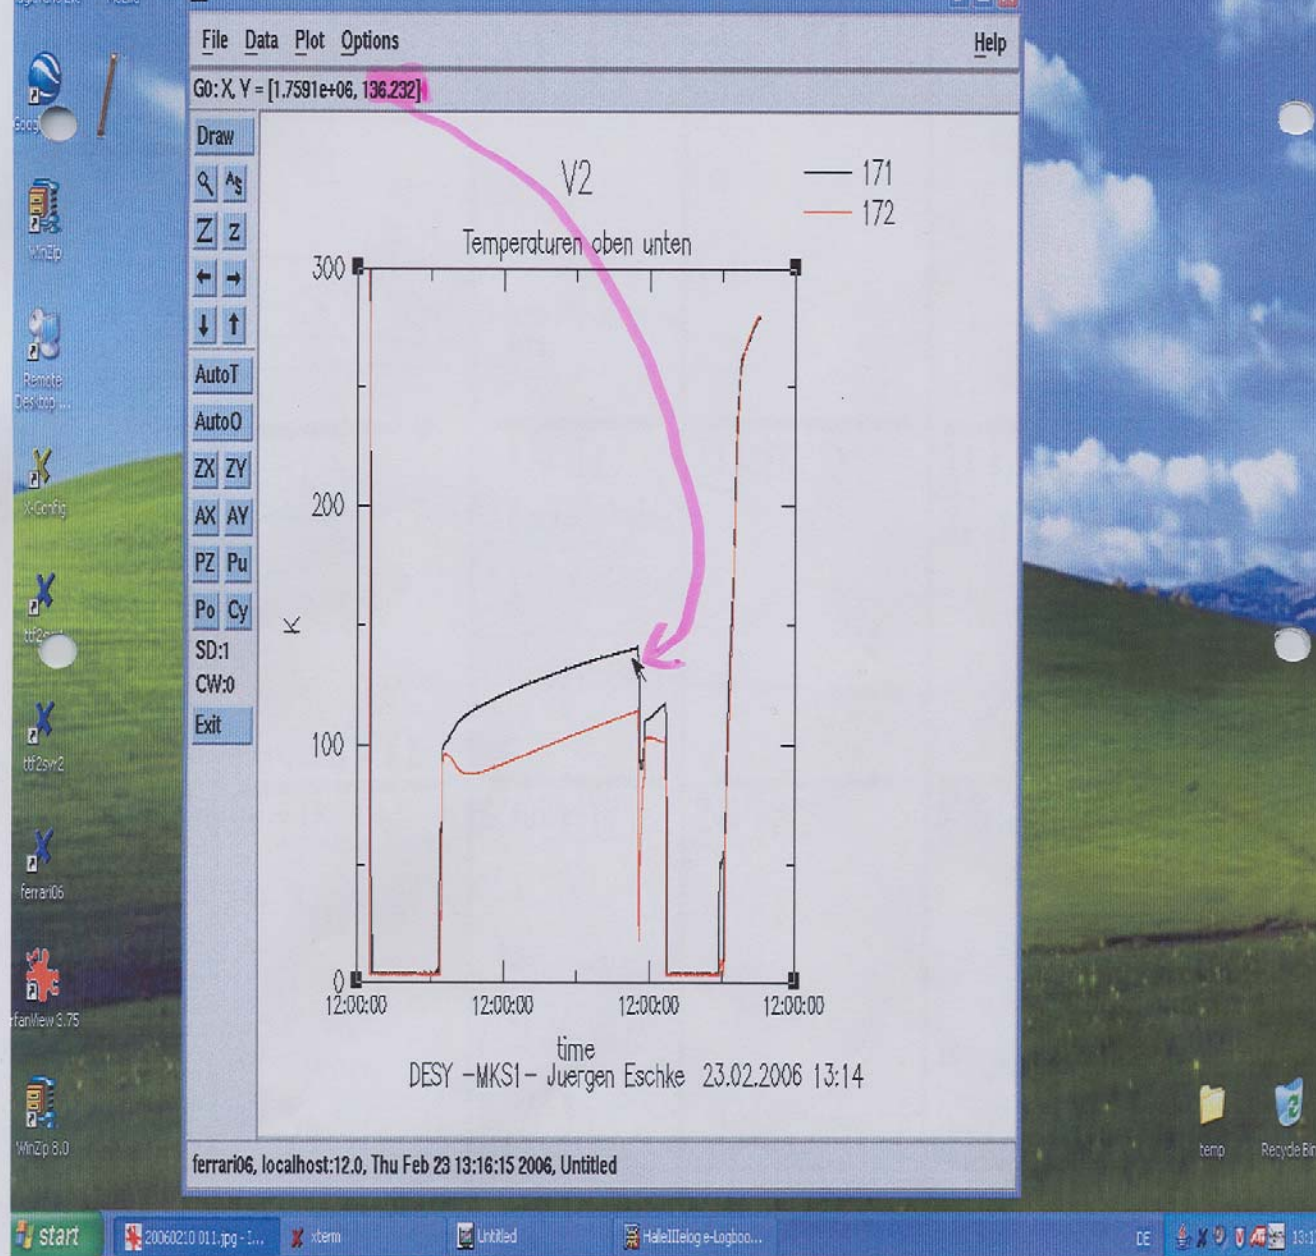

② AC 80 / V2 / 19.2.04 - 24.2.04

How to avoid H contamination

- Grinding with water free liquid [FC77, KEK]
- BCP below 22 °C [DESY]
- EP: venting of H, protection with cloth [KEK, DESY,..]
- EP: add HNO_3 to EP chemistry to protect the Nb surface by oxidation against H penetration [KEK]

Where does the H contamination come from?

- RRR300 Nb from companies is free of H (spec. requires less than 10 Wppm),
- Grinding under water will inject H from H₂O (reason for HERA cavities) [DESY, KEK,...]
- EDM will inject H [DESY, KEK, Jlab,...]
- BCP above 22 °C [DESY, Heraeus]
- EP produces H at cathode [chemistry]
- EP chemistry after switching off current) [KEK, Heraeus]

KEK Investigations on H disease :EP/BCP after grinding

circulating.

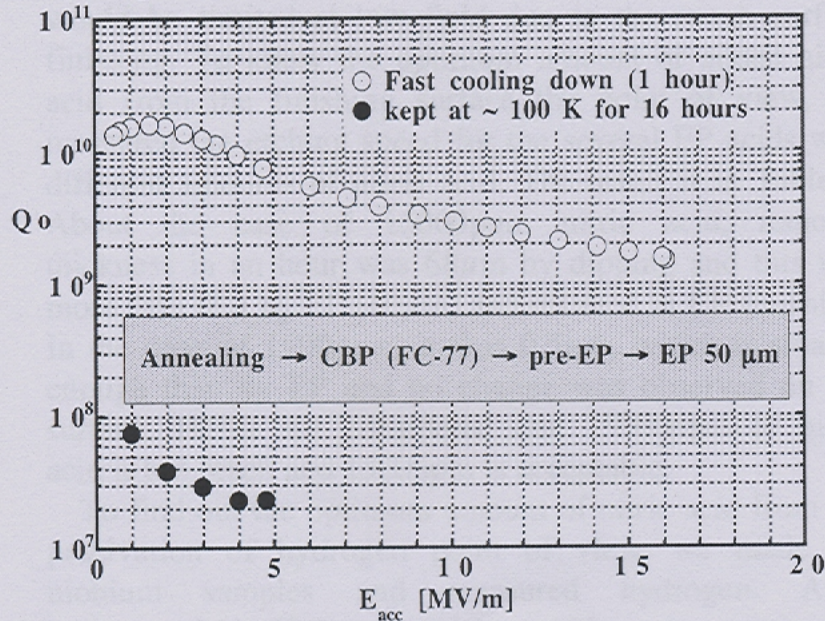


Figure 4: Heavy hydrogen Q-disease did occur when hydrogen-free CBP and EP were combined

combination of the hydrogen-free CBP and CP.


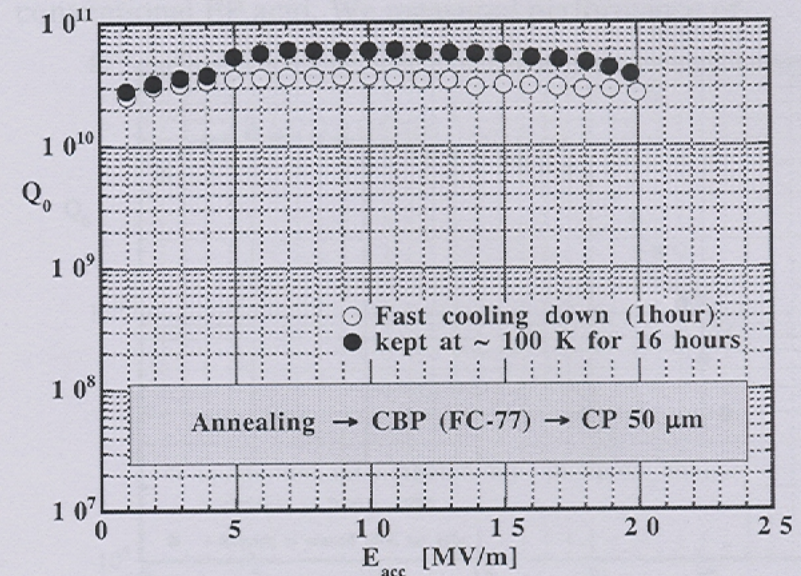


Figure 6: Hydrogen Q-disease did not occur with combination of hydrogen-free CBP and CP

KEK Investigations on H disease :EP(+HNO₃) after grinding

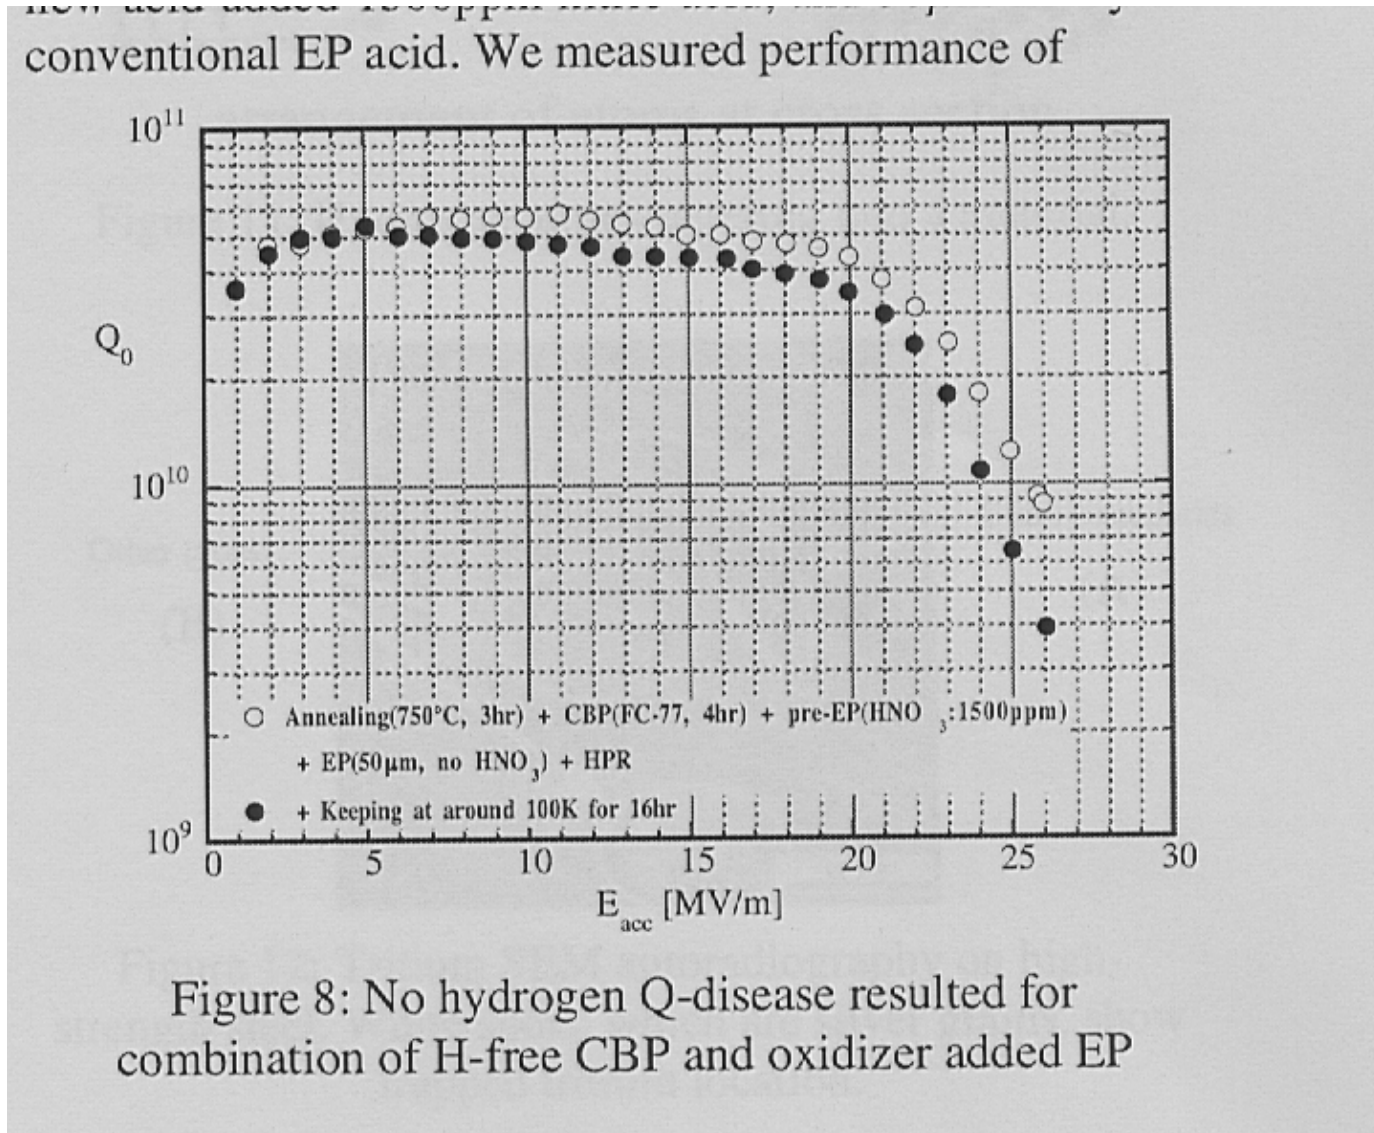

Failure report in EP system at KEK/Nomura


SMTF meeting

5 October 2005

Takayuki SAEKI (KEK)

Re-cavity 5-2nd Meas.
CP(10um)+HPR(KEK)+Baking(57H@120oC)+
H-collection (26H@100k)


2005/06/18 Sat.

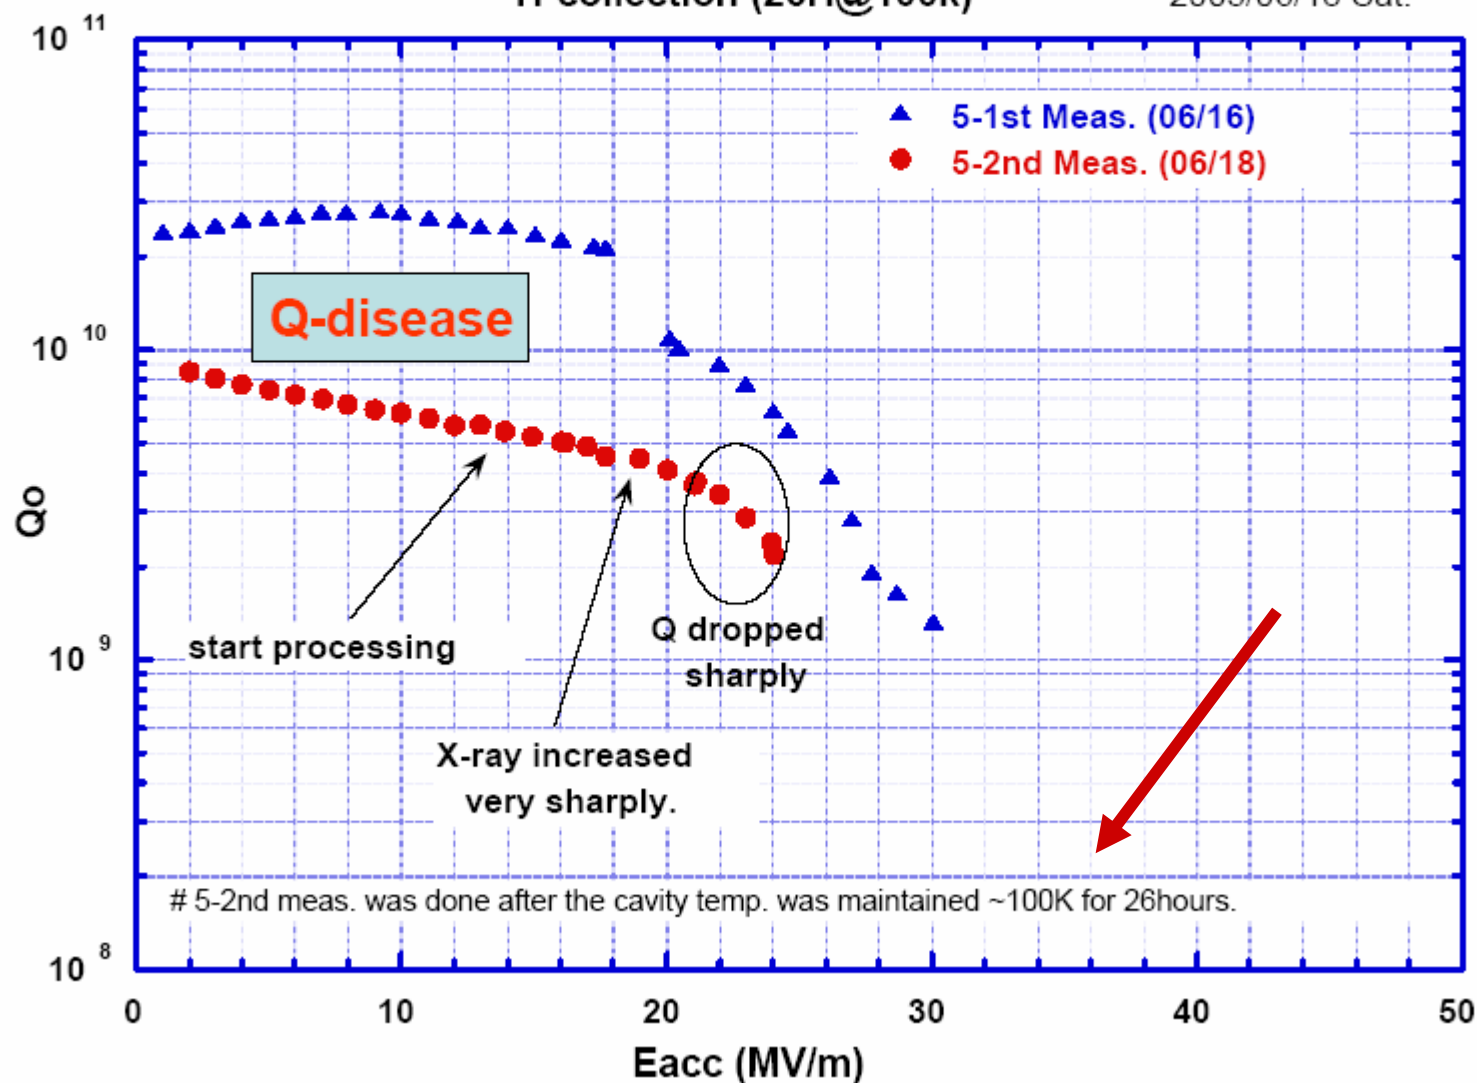

02March06


Cathode Bag

Hydrogen bubble trace on Nb surface

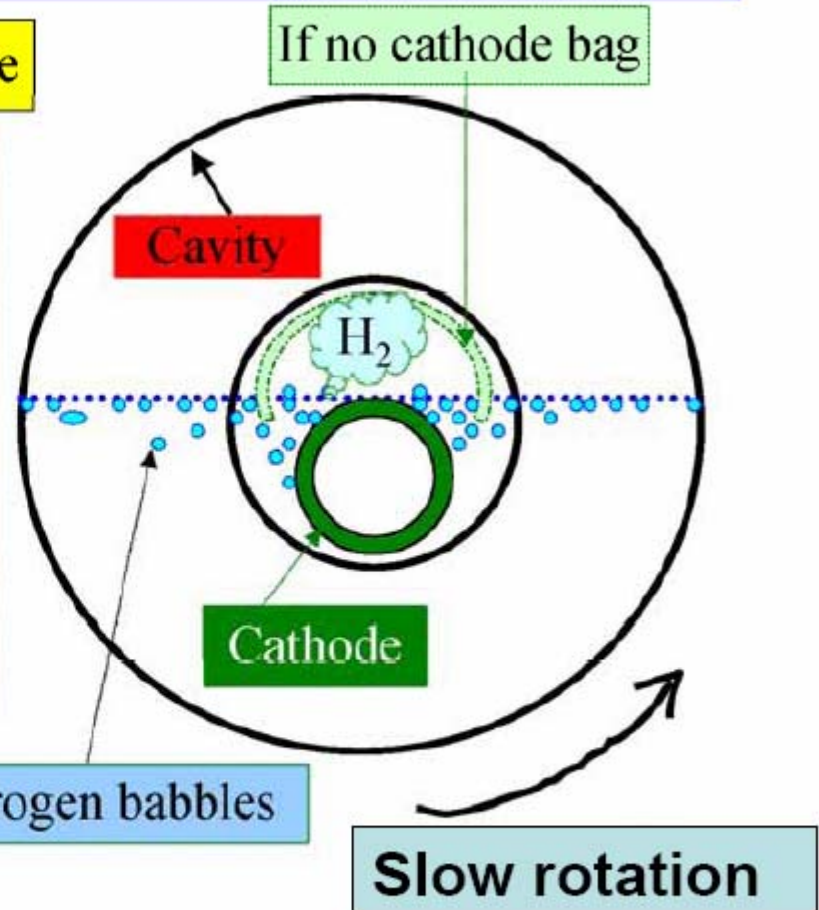



**Cathode bag was not setup properly by operator
=> Hydrogen Q-disease**

Cathode and cathode bag

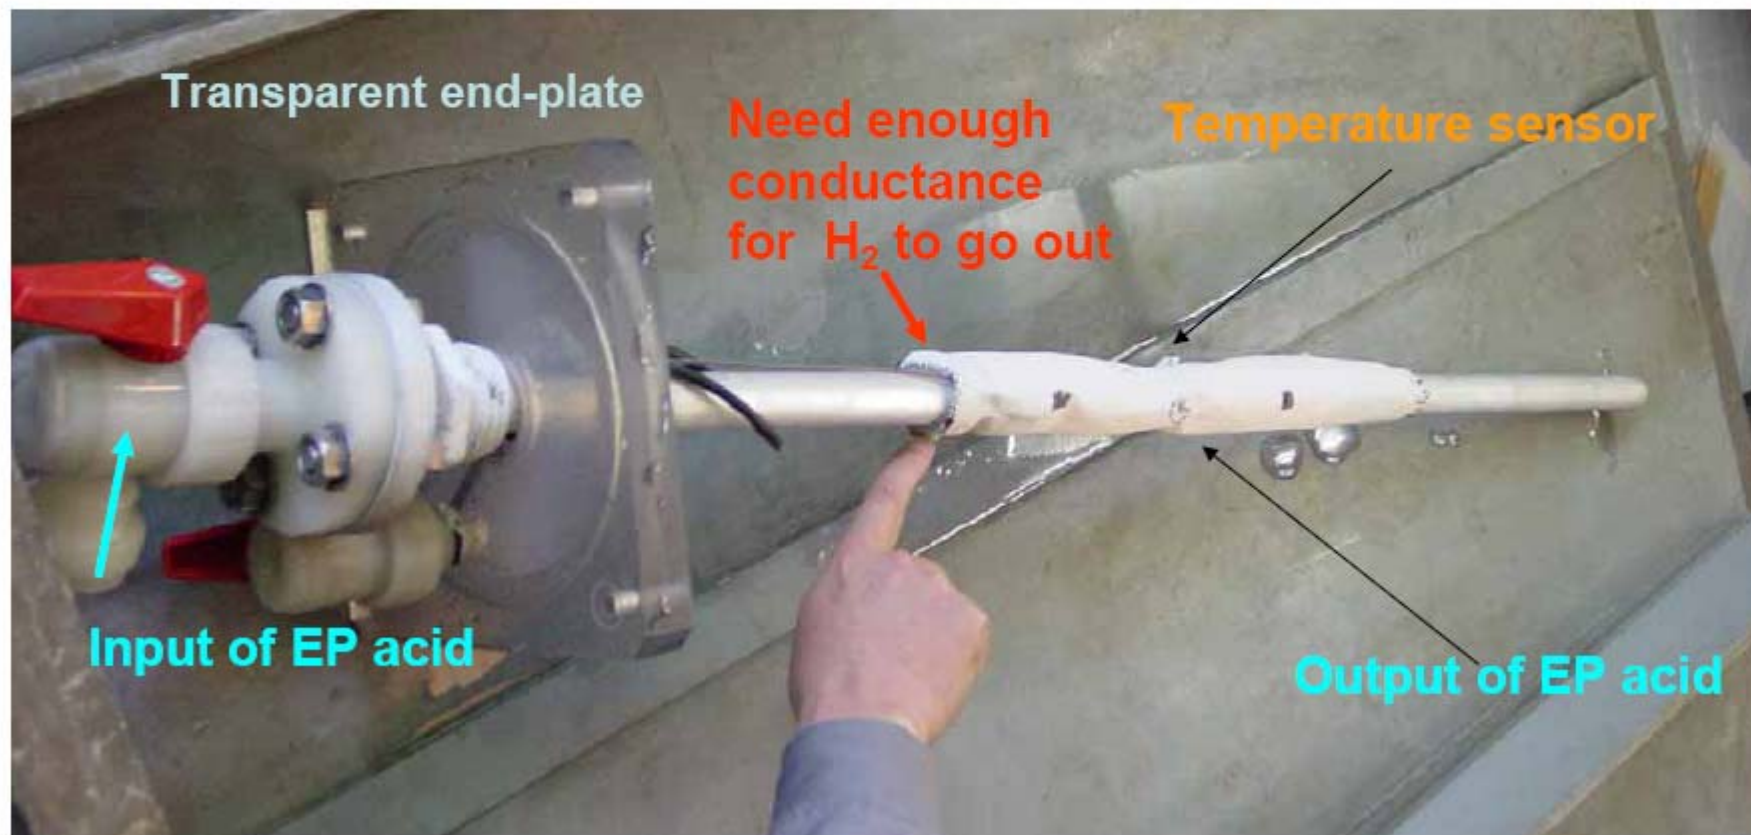

EP acid level control failure


EP acid output valves for level control

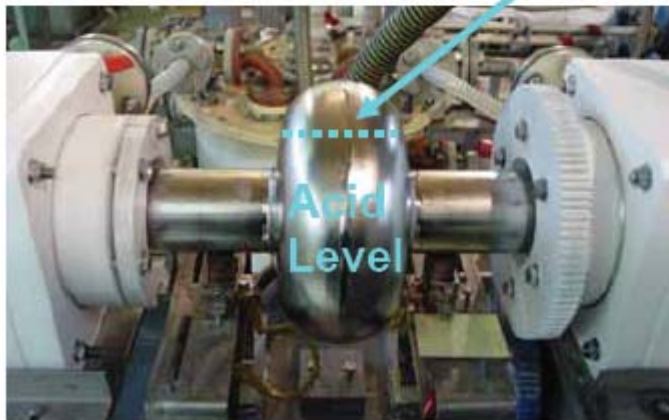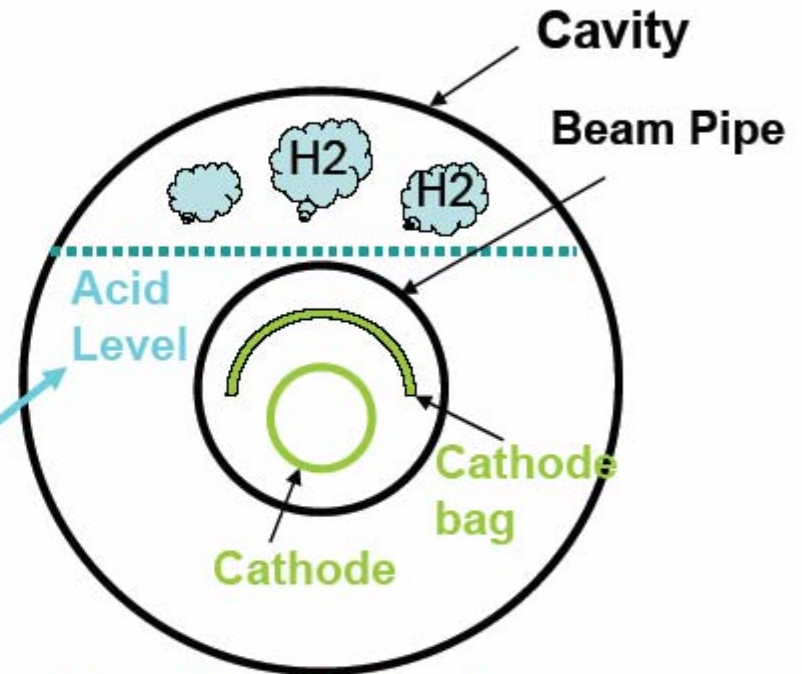

EP acid output valve was not properly controlled.



Hydrogen Q-disease

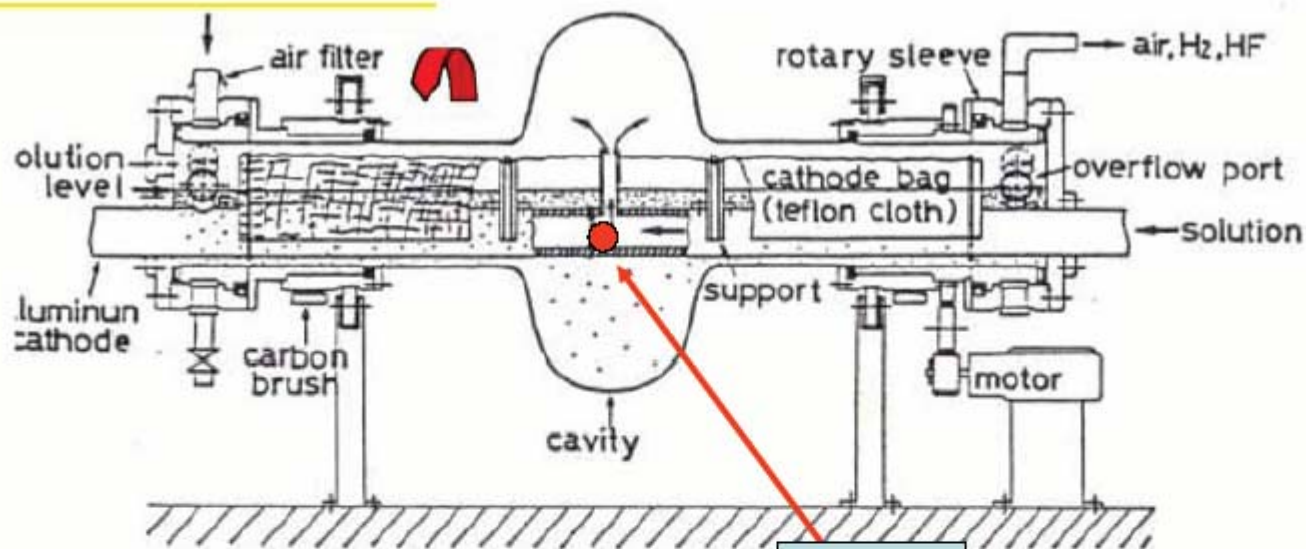


**EP acid temperature monitor
& control were not done properly.**

Related parameters:

**Voltage, Current, EP acid flow,
Reservoir tank temperature.**

**⇒ Operator forgot how to optimize
these parameter-set.**

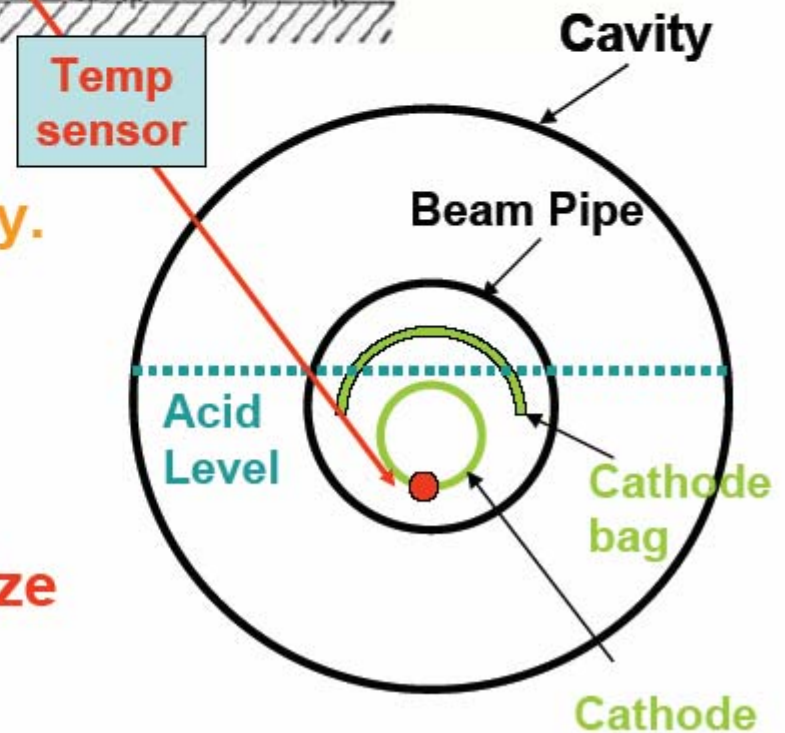

What was learned (H Q-disease)

Cause of failure

- Operators forgot what is important in cathode bag setup, EP acid level control, and temperature control.



Current status

- Check-list of all setups and parameters are prepared.
- Re-training operators.



Recommended system

- Future plan: Automatic monitoring, temp./valve-control by computer. But not easy for EP system parts (Teflon flow-meter, valve...expensive to replace with computer-controllable parts).

H disease: Areas for R&D

- Continue H disease tests on 9-cells
- Establish H disease tests on 1-cells
 - So far 5 tests, all no H disease
 - All are treated at Henkel company
 - They use constant current (DESY)
 - They mix the acid by themselves
- Communicate with other laboratories
 - Convince colleagues about need of H-test
- Start sample measurements (H content) after various treatments
 - Detailed program needs to be defined

H disease: Areas for R&D, cont.

- Stable EP parameters
 - Identify missing parameter for arbitrary appearance of H-disease
 - QA on EP chemistry
 - Control of all (?) relevant process parameter
 - H venting in multi-cell EP
 - H contamination after stop of EP / start of rinsing
- Is High RRR Nb more sensitive to H disease?

Alternative approach

- Heat treatment around 800°C will definitely clean Nb from Hydrogen
- EP has the danger of H contamination
- Therefore a low risk procedure could be:
 - EP of cavities to reach smooth surface
 - Heat treatment at 800°C
 - Only slight BCP for last cleaning, several um will not deteriorate the EP surface properties
 - HP rinse

Conclusion

- 5 out of 29 Q-tests uncovered H- disease
- These 5 cases belong to 4 different cavities
- In these 5 cases a new or additional EP treatment was applied
- In 4 out of these 5 cases the additional cryo-losses are not acceptable (and 24 MV/m might not be in reach)
- Correlation ? The acid container #17 was used for EP in 2+1/2 treatments; two other acid container for the two other treatments
- After 800°C heat treatment the Nb is cleaned from H contamination. Substitution of EP by BCP as final light cleaning will substantially reduce the risk of H disease.

Kenji`s Comments

From the study on Higuchi's PhD, I understood several things:

1) Mechanical polishing (Tumbling) dopes hydrogen, if it uses a >>> liquid contained hydrogen like water. >>>

2) EDM dopes hydrogen, which comes from oil or water used EDM. >>>

3) When once hydrogen is doped in those process, afterwards material >>> removal like BCP or EP cannot eliminate the hydrogen. >>>

4) Annealing can only remove the hydrogen. >>>

5) Even annealed, when the surface damaged layer still is remained >>> it will pick up hydrogen during EP. >>>

6) Hydrogen is picked up through grain boundary channels. So >>> concerning is grain boundaries.